

MAINTENANCE

Attention:

- ※ Periodical to maintain the wash light
- ※ Check the screw of the spare parts in order to use well
- ※ Clearing the dust and fragments of the inner wash light to keep the inner wash light clearly
- ※ Clearing the lens
- ※ More dust, smoke and granular can cause appearance of the wash light corrosively, even cause overheated to damage equipment
- ※ Attention: Before take the light apart, please cut the power source.



CAUTION: Take care using this equipment!
high voltage-risk of electric shock!!



Clearing

- ※ Cutting the power source when the light is cool, to move the cover of the light
- ※ Using the vacuum cleaner or the gas from air compressor to remove the dust of the appearance of the wash light
- ※ The lens need clearly once every week, otherwise to reduce the bright.
- ※ The fans need clear once every month, to promise the cool effect.
- ※ Clearing the lens must be take care, because the surface of the lens is easy to damage and cutting, and do not use the liquid to clean
- ※ The PCB do not use the liquid to clean, must be keep it dry, to avoid short circuit

24PCS 3IN1 LED washer wall LIGHT



USER MANUAL



At first, thank you for purchasing the device. For the sake of safety and regular operation of this projector, please read this manual carefully before using and operating it in order to avoid any personal injury or damage to the device.

WARNING

FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL
CAREFULLY BEFORE YOUR INITIAL START-UP!



CAUTION: Keep this equipment away from rain,
moisture and liquids.



SAFETY INSTRUCTIONS

Every person involved with the installation,
operation & maintenance of this equipment should:

- Be competent
- Follow the instructions of this manual



CAUTION: Take care using this equipment!
high voltage-risk of electric shock!!



Before your initial start-up, please make sure that there is no damage caused
during transportation. Should there be any, consult your dealer and do not use
the equipment.

To maintain the equipment in good working condition and to ensure safe
operation, it is necessary for the user to follow the safety instructions and
warning notes written in this manual.

Please note that damages caused by user modifications to this equipment are
not subject to warranty.

Digital display operate:

a). Illustration part:



MENU
A



UP
B



DOWN
C



ENTER
D

A.MENU

B.UP

C.DOWN

D.ENTER

Operation Instructions:

After startign press A(MENU) Enter into main-menu,
Press B(UP) C(DOWN) to select the submenu,
and then press D(ENTER)ensure.




ATTENTION:
DANGER OF LIFE! RISK OF BURNS!
RISK OF FIRE! RISK OF SHORT CIRCUIT!


DMX Signal Connection

3-Pin XLR to 5-Pin XLR Conversion

Conductor	3-Pin XLR Female (OUT)	5-Pin XLR Male (IN)
Ground/Shield	Pin 1	Pin 1
Data Compliment (-signal)	Pin 2	Pin 2
Data True (+signal)	Pin 3	Pin 3
Not Used		Pin 4-Do Not Used
Not Used		Pin 5-Do Not Used

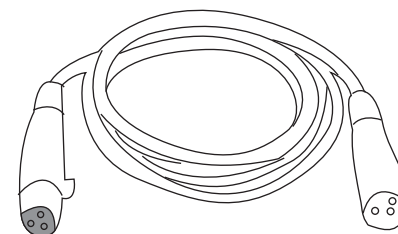


DMX-512 out
3-pin XLR

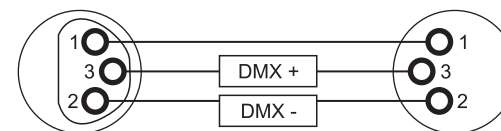

DMX-512 in
3-pin XLR

IN

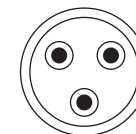

1=MASSA
2=DMX(-)
3=DMX(+)

OUT



You should find inside the LEDJ carton the following items:

- 1、LED LIGHT 2、Power cable 3、InstruCtion manual

Technical Specifications:

DMX Channels: 5/8/14/26/50

Voltage: AC 110-240V~50/60Hz

24Ultra bright LED's (RGB)

Operating modes:

- 1、Static color mode 2、Color changing mode 3、Color fade mode 4,Auto run mode
5、Sound active mode 6、Master slave mode 7、DMX mode

50 channels:

Channel	Value	Function	26	0-255	Strobe5
1	0-255	All dimming 1	27	0-255	Red 5 0-100%
2	0-255	Strobe1	28	0-255	Green 5 0-100%
3	0-255	Red 1 0-100%	29	0-255	Blue 5 0-100%
4	0-255	Green 1 0-100%	30	0-255	Auto program5
5	0-255	Blue 1 0-100%	31	0-255	All dimming 6
6	0-255	Auto program1	32	0-255	Strobe6
7	0-255	All dimming 2	33	0-255	Red 6 0-100%
8	0-255	Strobe2	34	0-255	Green 6 0-100%
9	0-255	Red 2 0-100%	35	0-255	Blue 6 0-100%
10	0-255	Green 2 0-100%	36	0-255	Auto program6
11	0-255	Blue 2 0-100%	37	0-255	All dimming 7
12	0-255	Auto program2	38	0-255	Strobe7
13	0-255	All dimming 3	39	0-255	Red 7 0-100%
14	0-255	Strobe3	40	0-255	Green 7 0-100%
15	0-255	Red 3 0-100%	41	0-255	Blue 7 0-100%
16	0-255	Green 3 0-100%	42	0-255	Auto program7
17	0-255	Blue 3 0-100%	43	0-255	All dimming 8
18	0-255	Auto program3	44	0-255	Strobe8
19	0-255	All dimming 4	45	0-255	Red 8 0-100%
20	0-255	Strobe4	46	0-255	Green 8 0-100%
21	0-255	Red 4 0-100%	47	0-255	Blue 8 0-100%
22	0-255	Green 4 0-100%	48	0-255	Auto program8
23	0-255	Blue 4 0-100%	49	0-255	See Color Chase Table
24	0-255	Auto program4	50	0-255	Chase Speed Slow To Fast
25	0-255	All dimming 5			

b).LED Display Function table

MENU	ADDR	A001	A512		DMX address
	ChND	5CH	8CH	14CH	DMX Channels
		26CH	50CH		
	SLMd	MAST	SL1	SL2	Master/slave mode
	SoUn	So 0	So 16		Sound Mode
	Auto	Au 0	Au 16	SP 0	Auto mode
				SP 9	
	Colo	Co 1			Colors presets
		Co 7			
	Manu	Red			Manual Mode
Green		0-255			
Blue					
Disp	Disp			Menu Inversion	
uer	u20			Software Version	

Color Chase Table

Color Chase	000-007 No function
	008-022 Color Chase 01
	023-037 Color Chase 02
	038-052 Color Chase 03
	053-067 Color Chase 04
	068-082 ColorChase 05
	083-097 ColorChase06
	098-112 Color Chase 07
	113-127 Color Chase 08
	128-142 Color Chase 09
	143-157 Color Chase10
	158-172 Color Chase 11
	173-187 Color Chase 12
	188-202 Color Chase 13
	203-217 Color Chase 14
	218-232 Color Chase 15
	233-247 Color Chase 16
	248-255 Sound active

5 channels:

Channel	Value	Function
1	0-255	Red 0-100%
2	0-255	Green 0-100%
3	0-255	Blue 0-100%
4	0-255	See Color Chase Table
5	0-255	ChaseSpeedSlow To Fast

8 channels:

Channel	Value	Function
1	0-255	All dimming
2	0-255	Strobe
3	0-255	Red 0-100%
4	0-255	Green 0-100%
5	0-255	Blue 0-100%
6	0-255	Auto program
7	0-255	See Color Chase Table
8	0-255	ChaseSpeedSlow To Fast

14 channels:

Channel	Value	Function
1	0-255	All dimming 1
2	0-255	Strobe
3	0-255	Red 1 0-100%
4	0-255	Green 1 0-100%
5	0-255	Blue 1 0-100%
6	0-255	Auto program
7	0-255	All dimming 2
8	0-255	Strobe
9	0-255	Red 2 0-100%
10	0-255	Green 2 0-100%
11	0-255	Blue 2 0-100%
12	0-255	Auto program
13	0-255	See Color Chase Table
14	0-255	ChaseSpeedSlow To Fast

26 channels:

Channel	Value	Function
1	0-255	All dimming 1
2	0-255	Strobe1
3	0-255	Red 1 0-100%
4	0-255	Green 1 0-100%
5	0-255	Blue 1 0-100%
6	0-255	Auto program1
7	0-255	All dimming 2
8	0-255	Strobe2
9	0-255	Red 2 0-100%
10	0-255	Green 2 0-100%
11	0-255	Blue 2 0-100%
12	0-255	Auto program2
13	0-255	All dimming 3
14	0-255	Strobe3
15	0-255	Red 3 0-100%
16	0-255	Green 3 0-100%
17	0-255	Blue 3 0-100%
18	0-255	Auto program3
19	0-255	All dimming 4
20	0-255	Strobe4
21	0-255	Red 4 0-100%
22	0-255	Green 4 0-100%
23	0-255	Blue 4 0-100%
24	0-255	Auto program4
25	0-255	See Color Chase Table
26	0-255	ChaseSpeedSlow To Fast