

Fog Machine with 6 LED



USER MANUAL

Installation:

1. Take away all pack material especially the spray mouth.
2. Set in the horizontal direction and open the cover of liquid can.
3. Add high quality fog liquid in the machine and screw the cover of liquid can. Bad quality fog liquid will damage fog machine.
4. Plug the plug of remote console in the socket of the back of machine.

Operation:

1. Connect the power line to the power socket with earth line. Turn the switch at “ On” and the machine heat. The red LED of line console will light once the machine finish heat.
2. Press red key, the machine will spray fog (Press it as long as you need).
3. The red LED of remote console light or not means the machine can spray fog or heat itself.
4. Can set the machine at a high place (with hanger) or on the ground. Do not spray fog to people directly and the lean angle should less than 15° .
5. Often check whether there has enough fog liquid in machine. The operation will make big damage to the machine if there has no fog liquid.
6. If the fog is small, plum has noise or there has no fog, please power off and check fog liquid, fuse, the connector of remote console and power plug. If the problem could not be solved after check these parts, please stop check and send it back to distributor for repair.

Repair:

- Please clean the fog machine timely to avoid the damage of spare parts and decrease the repair charge.
- Don't make the fog machine be dirty. Screw the cover of liquid can after add fog liquid.
- After about 40 hours continually use, please use 80% distilled water and 20% vinegar to clean the dirty in refractory pipe.
- Disassemble the spray mouth and use vinegar to clean it to keep expedite before heat.
- Reequip the spray mouth after cool and add fog liquid for next use.

Informations:

Power	900W/1200W
Tank capacity	1 litres
Light source	6PCS*3W RGB LED
Heat-up time	5 min
Fog volume	18000 cu.ft/min
Remote control range	20m
Control mode	DMX/wire control and wireless remote control
Power supply	100-240Vac 50/60Hz
Dims	34*28*16cm
Weight	2.8kg


DMX operation:

Connect the unit on a DMX controller or insert into a DMX chain via a DMX cable and set the start address.

The unit has 6 DMX channels that are allocated as follows:

Channel	Description
CH 1	Fog output
CH 2	Auto color change mode red-blue-green
CH 3	Red on
CH 4	Green on
CH 5	Blue on
CH 6	No function

Remote illustration:

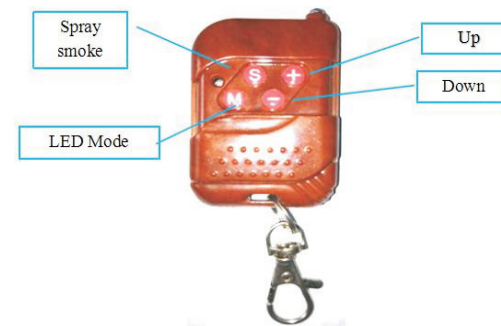

Main Menu:

No	Display	Mode/Function	Button	Function	Features
	A001-A511	DMX Mode	MENU	Auto	Under DMX, pls do not operate in manual model
			UP	DMX ADD UP	
			DOWN	DMX ADD DOWN	
			ENTER	1 st save, 2 nd spay	

LED Setting:

No	Display	Mode/Function	Button	Function
1	C***	Single color mode	M	Next menu
			+	Next color
			-	Last color
			S	Spray fog
2	Tb_*	hopping change mode,	M	Next menu
			+	hopping change ,speed down,, total 6 class
			-	hopping change speed up, total 6 class
			S	Spray fog
3	Jb_*	gradient change mode	M	1 st menu
			+	gradient change speed down,, total 6 class
			-	gradient change speed down,, total 6 class
			S	Spray fog

- This Led Fog Machine has two led mode, normal mode & LED setting mode
- Normal Mode : Press any key of remote to start spray smoke (reach certain degree), LED light on
- LED Setting Mode: setting led working mode of spraying smoke, such as single color mode, hopping change mode, gradient change mode

Attention:

- Please obey all notices about operation. Safety and repair to avoid getting an electric shock and keep the excellent effect.
- Keep clean
- Use indoor.
- Put in the horizontal direction and don't incline and place upside down.
- Power off or pull out plug after use.
- No waterproof, if there are some humidity, water or fog liquid in it, please switch off power and contact distributor as soon as possible.
- There are no spare parts with machine. If you need to repair it, please contact distributor or professional repair works.
- Avoid fire
- Only for adults operate. Equip it over the touch of children and pay more attention during operation.
- Don't spray it to people directly and far away fire.
- The temperature of smoke is very high so that keep the space between machine and other material things more than 100cm.
- Put the machine at a drafty place and don't cover the cool holes to keep the best cool effect.
- Keep the space between the smoke machine and around things more than 20cm and between smoke machine and tinder more than 20cm. And without easily burnt things within 300cm
- Pay more attention to all notices sign and operation instructions on all machines.
- Please use the high quality fog liquid recommended by distributors. Bad quality fog liquid may get blast or spray oil.
- Often check whether there has enough fog liquid.
- Get out all fog liquid before transport or post.
- Don't eat fog liquid otherwise to see the doctor immediately. Use clean water to wash skin and eyes once fog liquid touches them.

Remove package and check:

1. Open carton to check whether all necessary spare parts include accord the specification list. Please contact distributor if there are something missed.
2. Check the appearance of machine and power line to see whether they have some obvious damage. Please contact distributor once you find something and stop to use fog machine.