

INSTALLATION

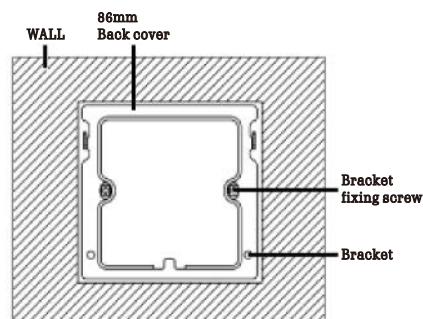 
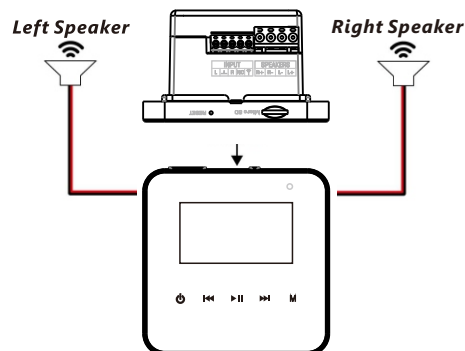 
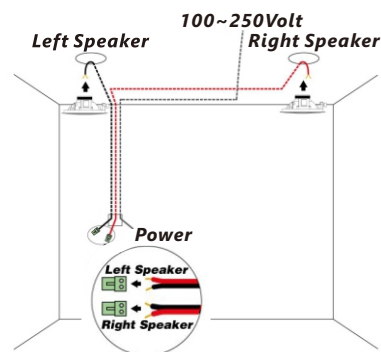 


Figure 1

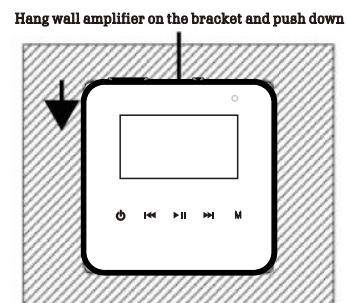 


Figure 2

INSTALLATION INSTRUCTIONS

1. Mount the supplied back box in the wall.
2. Tighten the bracket with the bracket screw on the back box. (as shown in figure 1)
3. Place the wall amplifier in the back box. Hold 40 mm in front of the back and keep it as high as possible. Press the wall amplifier against the back box and slide it downwards. (as shown in figure 2)

TECHNICAL SPECIFICATION

Output power: 2 x 8 Watts (THD+N 1%), 2 X 9 Watts (THD+N 10%).
Impedance: 8 ohms
Frequency response: 20Hz ~ 20kHz
FM radio frequency range: 88.0MHz~108.0MHz
Signal to Noise ratio: >87dB
Power supply: 100~250VAC / 50~60Hz
Dimensions: 86mm x 86mm x 52mm

The specifications are typical. The actual values can slightly change from one unit to the other.
Specifications can be changed without prior notice.

Wall amplifier

Owner's Manual

English

31 May, 2022
Ver: A

Congratulations to the purchase of this wall amplifier. Please read this manual thoroughly prior to using the unit in order to benefit fully from all features.

Read the manual prior to using the unit. Follow the instructions in order not to invalidate the warranty. Take all precautions to avoid fire and/or electrical shock. Repairs must only be carried out by a qualified technician in order to avoid electrical shock. Keep the manual for future reference.

- Prior to using the unit, please ask advice from a specialist. When the unit is switched on for the first time, some smell may occur. This is normal and will disappear after a while.
- The unit contains voltage carrying parts. Therefore do NOT open the housing.
- Do not place metal objects or pour liquids into the unit. This may cause electrical shock and malfunction.
- Do not place the unit near heat sources such as radiators, etc. Do not place the unit on a vibrating surface. Do not cover the ventilation holes.
- The unit is not suitable for continuous use.
- Be careful with the mains lead and do not damage it. A faulty or damaged mains lead can cause electrical shock and malfunction.
- When unplugging the unit from a mains outlet, always pull the plug, never the lead.
- Do not plug or unplug the unit with wet hands.
- If the plug and/or the mains lead are damaged, they need to be replaced by a qualified technician.
- If the unit is damaged to such an extent that internal parts are visible, do NOT plug the unit into a mains outlet and DO NOT switch the unit on. Contact your dealer.
- To avoid fire and shock hazard, do not expose the unit to rain and moisture.
- All repairs should be carried out by a qualified technician only.
- Connect the unit to an earthed mains outlet (100-250Vac/50~60Hz) protected by a 10~16A fuse.
- During a thunderstorm or if the unit will not be used for a longer period of time, unplug it from the mains. The rule is: Unplug it from the mains when not in use.
- If the unit has not been used for a longer period of time, condensation may occur. Let the unit reach room temperature before you switch it on.
- Never use the unit in humid rooms or outdoors.
- To prevent accidents in companies, you must follow the applicable guide lines and follow the instructions.
- Do not repeatedly switch the fixture on and off. This shortens the life time.
- Keep the unit out of the reach of children. Do not leave the unit unattended.
- Do not use cleaning sprays to clean switches. The residues of these sprays cause deposits of dust and grease. In case of malfunction, always seek advice from a specialist.
- Do not force the controls.
- This unit is with speaker inside which can cause magnetic field. Keep this unit at least 60cm away from computer or TV.
- If this product have a built-in lead-acid rechargeable battery. Please recharge the battery every 3 months if you are not going to use the product for a long period of time. Otherwise the battery may be permanently damaged.
- If the battery is damaged please replace with same specifications battery. And dispose the damaged battery environment friendly.
- If the unit has fallen, always have it checked by a qualified technician before you switch the unit on again.
- Do not use chemicals to clean the unit. They damage the varnish. Only clean the unit with a dry cloth.
- Keep away from electronic equipment that may cause interference.
- Only use original spares for repairs, otherwise serious damage and/or dangerous radiation may occur.
- Switch the unit off prior to unplugging it from the mains and/or other equipment. Unplug all leads and cables prior to moving the unit.
- Make sure that the mains lead cannot be damaged when people walk on it. Check the mains lead before every use for damages and faults!
- The mains voltage is 100-250Vac/50~60Hz. Check if power outlet match. If you travel, make sure that the mains voltage of the country is suitable for this unit.
- Keep the original packing material so that you can transport the unit in safe conditions.

- ⚠ This mark attracts the attention of the user to high voltages that are present inside the housing and that are of sufficient magnitude to cause a shock hazard.
- ⚠ This mark attracts the attention of the user to important instructions that are contained in the manual and that he should read and adhere to.

The unit has been certified CE. It is prohibited to make any changes to the unit. They would invalidate the CE certificate and their guarantee!

NOTE: To make sure that the unit will function normally, it must be used in rooms with a temperature between 5°C/41°F and 35°C/95°F.

- ♻ Electric products must not be put into household waste. Please bring them to a recycling centre. Ask your local authorities or your dealer about the way to proceed. The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

Do not attempt to make any repairs yourself. This would invalid your warranty. Do not make any changes to the unit. This would also invalid your warranty. The warranty is not applicable in case of accidents or damages caused by inappropriate use or disrespect of the warnings contained in this manual. We cannot be held responsible for personal injuries caused by a disrespect of the safety recommendations and warnings. This is also applicable to all damages in whatever form.

UNPACKING INSTRUCTION

CAUTION! Immediately upon receiving the product, carefully unpack the carton, check the contents to ensure that all parts are present, and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damage from shipping or the package itself shows signs of mishandling. Save the package and all packing materials. In the event that the product must be returned to the factory, it is important that the product be returned in the original factory box and packing.

 
If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

POWERSUPPLY

The type of power supply that must be connected is indicated on the label on the backside of the product. Check that the mains voltage corresponds to this, all other voltages than specified, the device can be irreparably damaged. The product must also be directly connected to the mains, no dimmer or adjustable power supply.

- ⚠ Always connect the device to a protected circuit (fuse).

OVERVIEW

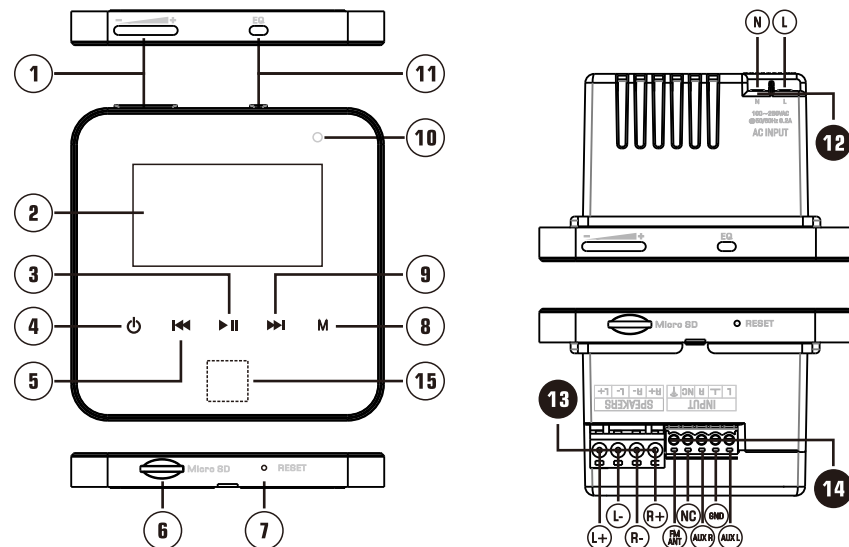

- VOLUME - / +:** Press and hold for a few seconds this button to adjust (decrease or increase) the audio volume in Micro SD, BT, AUX or FM radio mode.
- LCD SCREEN.**
- PLAY/PAUSE:** This touch are 2 preset functions.
1. Touch once to begin playing. Press again to pause.
2. Touch and hold for a few seconds to automatically search for the radio station, after about 1 minute the valid stations will be stored (only in FM radio mode).
- POWER:**
Connect the POWER, touch and hold for a few seconds to turn off, touch and hold for a few seconds again to turn on.
!!!CAUTION: THE VOLUME LEVEL LESS THAN 3 OR MORE THAN 20, WHEN TURNED OFF. THE VOLUME LEVEL WILL BE RESET TO 8 AFTER THE UNIT IS TURNED ON.
- PREVIOUS:** Touch once to move the input to the back ward track (or back ward radio station) in Micro SD, BT or FM radio mode.
- MICRO SD STORAGE DEVICE CONNECTION PORT**
- RESET:** Press this button to reset the unit.
- MODE:** Touch once to change the current access device of the unit (BT - AUX - Micro SD - FM radio). The unit priority read Micro SD.
- NEXT:** Touch once to move the input to the forward ward track (or forward ward radio station) in Micro SD, BT or FM radio mode.
- LEDs INDICATOR:**
The unit connect the power, Blink 5-color LEDs in turn.
1. In the BT mode, BT disconnect the white & yellow LED is blink, BT connect and playing yellow LED is lit.
2. In the AUX mode, the purple LED is lit.
3. In the Micro SD mode, the blue LED is lit.
4. In the FM radio mode, the green LED is lit.
5. Blink white LED each 1 minute, after turn off the unit.
- EQ:** The EQ are 5 preset Equalizer.
(NOR-JAS-CLA-POP-ROC)
!!!CAUTION: No effects in FM radio and aux mode
- POWER CONNECTION TERMINALS.**
- LOUDSPEAKER CONNECTION TERMINALS.**
- AUX AND FM ANTENNA CONNECTION TERMINALS.**
- INFRARED REMOTE CONTROL**

REMOTE CONTROL & BT CONNECT

⏻	POWER SWITCH ON/OFF
EQ	EQ CONTROL
⌂	MUTE
VOL+	VOLUME +
VOL-	VOLUME -
⏮	PREVIOUS
⏭	NEXT
⏸	PLAY/PAUSE
MENU	NO RESPONSE
INFO	NO RESPONSE
⏮	REPEAT
BT	BLUETOOTH MODE
M	MODE SELECT



- Activate the BT-function on your device (smart phone, tablet etc.) from which you want to play the music. see the operating instructions for that device.
- Select "media player" on your BT-device and make the BT-connection.
Attention: The BT distance is approx. 10 meter without any barrier.