


100W BEAM LED MOVING HEAD LIGHT

USER MANUAL

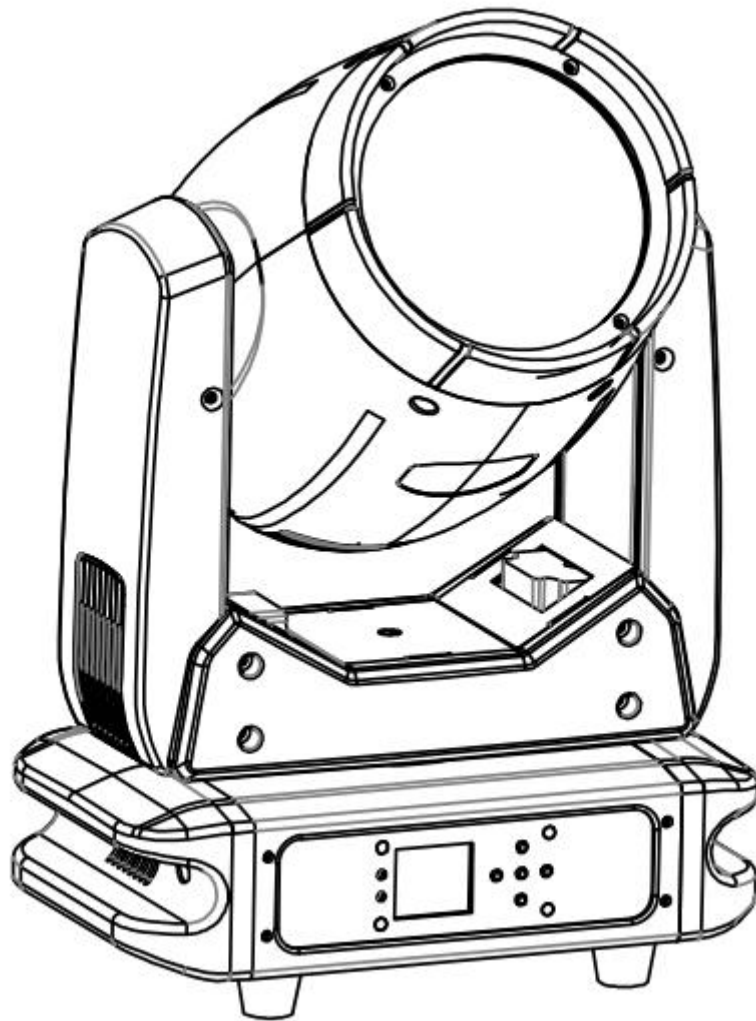

Please read over this manual before operation the light

CONTENTS

Chapter 1 Installation and attention.....	1
1. Maintenance.....	1
2. Statement.....	1
3. Safety Precaution.....	1
4. Cable connection (DMX)	1
5. Rigging (Optional).....	2
6. RDM NOTE.....	2
Chapter 2 Panel operation.....	4
1. Brief.....	4
2. Operation.....	4
1. Operate fixture with touch or encoder/button.....	4
2. Parameter value setting.....	4
3. Boolean parameter setting.....	5
4. Sub Menu (Parameter)	5
3. Operation and parameter instruction.....	6
1. DMX Address setting.....	6
2. Fixture operating mode setting.....	6
3. Set display.....	7
4. Scene.....	7
5. Set light run parameter.....	8
6. Status and information.....	9
Chapter 3 Channel description.....	11
1. Channel table.....	11

Chapter 1 Installation and attention

1. Maintenance

- To reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.
- Intermittently using will extend this item's service life.
- Please clear the fan, fan net, and optical lens in order to keep good work state.
- Do not use the alcohol or any other organic solvent to wipe the shell.

2. Statement

The product has perfect performance and integrity packing. All users should be strictly complying with the warning and operating instructions as stated. Or we aren't in charge of any result by misusing. Any damage resulting by misuse is not within the Company's warranty. Any fault or problem caused by neglecting the manual is also not in the charge of dealers.

Note: All information is subject to change without prior notice.

3. Safety Precaution

- In order to guarantee the product's life, please don't put it in the damp places or even the environment over 60degrees.
- Always mount this unit in safe and stable matter.
- Install or dismantle should operate by professional engineer.
- Using lamp, the change rate of power voltage should be within $\pm 10\%$, If the voltage is too high, it will shorten the light's life; If it's not enough, will influence the effect.
- Please restart it 20 minutes later after turning off light, until full-cooling. Frequent switching will reduce the life span of lamps and bulbs; intermittent using will improve the life of bulbs and lamps.
- In order to make sure the product is used well, please read the Manual carefully.

4. Cable connection (DMX)

Use a cable conforming to specifications EIA RS-485: 2-pole twisted, shielded, 120Ohm characteristic impedance, 22-24AWG, low capacity. Do not use microphone cable or other cable with characteristics differing from those specified. The end connections must be made using XLR type 3 or 5-pin male/female connectors. A terminating plug must be inserted into the last projector with a resistance of 120Ohm (minimum 1/4 W) between terminals 2 and 3.

IMPORTANT: The wires must not make contact with each other or with the metal casing of the connectors. The casing itself must be connected to the shield braid and to pin 1 of the connectors.

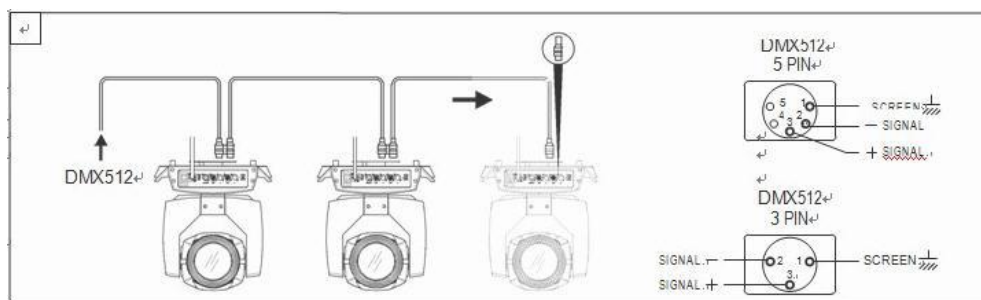


Figure 1 DMX Cable connection

5. Rigging (Optional)

This equipment can be positioned and fixed by clamp in every direction of the stage. Locking system makes it easy to fasten to the bracket.

Attention! Two clamps is needed to fix the equipment. Every clamp is locked by fastener of 1/4 kind. Fastener can only be locked clockwise.

Attention! Fasten a safety string to the additional hole of side aluminum piece. The secondary accessory can not hang on the delivery handle. Nip the equipment on bracket.

- Check if rigging clamp (not including the one inside) damaged or not? If stand ten times weight as the equipment. Make sure the architecture can stand ten times weight as all the equipment, clamps, wiring and other additional fixtures.
- Screws for clamping must be fixed firmly. Take one M12 screw (Grade 8.8 or higher) to clamp bracket, and then screw the nuts.
- Level the two hanging points at the bottom of clamp. Insert fastener to the bottom, lock the two levers by 1/4 rotating clockwise; then install another clamp.
- Install on safety string which stands at least ten times weight as equipment. Terminal of the accessory is designed for clamps.
- Make sure pan/tilt lock unlocked or not. Keep the distance more than 1M from equipment to flammable material or lighting source.

Figure 2 Installation

6. RDM Note

RDM is an extended version of DMX512-A protocol. It is a remote device management protocol. Traditional DMX512 protocol communication is one-way communication. The protocol is based on RS-485 bus. RS-485 is a time-sharing multi-point, half-duplex protocol. Only one port is allowed to output at the same time. So, when using RDM, we should pay attention to it. The

following points:

- To use console or host device that supports RDM host protocol.
- Use bidirectional signal amplifier, traditional one-way signal amplifier is not suitable for RDM protocol, because the RMD protocol needs feedback data, the use of one-way amplifier will block the return of data, resulting in no search fixture;
- All fixture must be set to DMX mode to ensure only one host on the cable.
- A 120 ohm impedance matching resistor must be inserted between terminals 2 and 3 of the terminal plug. When the signal line is longer, reducing the signal reflection will make the differential signal more stable and beneficial to the quality of communication.
- When the fixture appears to accept DMX control, but can not been search by RDM host, first check the signal amplifier, and then check whether the signal line 2, 3 lines have bad contact.

Chapter 2 Panel operation

1. Brief

The light panel diagram show as Figure 3, above area is fixture description, below area show fixture real-time status, such as DMX cable status, lamp status, error or information(ps. when there are message haven't been checked, echo 'ERR' in status bar, otherwise echo 'NOR').

Display & operation just like 'Android operation system', when select or set item value, system save the setting immediately.

RDM protocol is embed in fixture, user set DMX address via cable using the controller support RDM function. when fixture was search by controller, display will echo 'RDM' indicate this RDM is work.



Figure 3 Panel diagram

2. Operation

1. Operate fixture with touch or encoder/button

- The left area is TFT Display and touch(product which support touch), click item or value with finger will to complete operation of set light setting(parameters) or view light state.
- The area on the right hand side is rotary encoder with button or key, As auxiliary input interface, if fixture disable touch function, the encoder/key can been choose to set or view the item, and then press the encoder button/key to confirm the selection, rotary encoder or push key again set the parameter value, finally, Press encoder button/key one again to save value or setting.

2. Parameter value setting

When the selected item is value need to been modified, the dialog shown in Figure 4 will pop up.

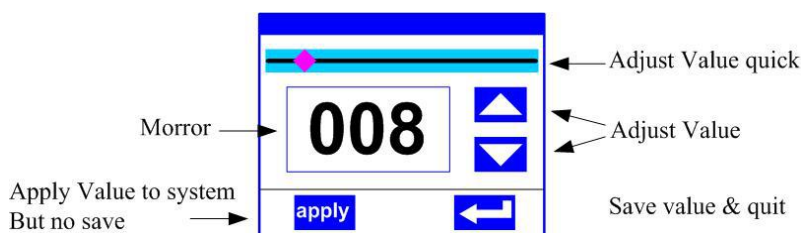


Figure 4 Dialog of value setting

- **Modify value:** Can quickly modify value via pull the slider to the desired position, or click the button of ‘up’ or ‘down’ whit finger on the right side to set the exact desired value, another way is roll encoder on the right hand side of panel.
- **Apply value:** When Value had been modified, Then press the bottom of ‘apply’ in the left corner to apply to the light, but haven’t saved;
- **Save Value:** Any time, click on the lower right corner of the "OK" button, the setting will be saved into internal memory.

3. Boolean parameter setting

- when the selected parameters is a Boolean value (such as ON or OFF), can directly modify setting by chick corresponding item, the setting will be saved right now.
- When the parameter is a key item, chick corresponding item, a dialog shown in Figure 5 will be popup ask for the confirm. Chck ‘sure’ to confirm.

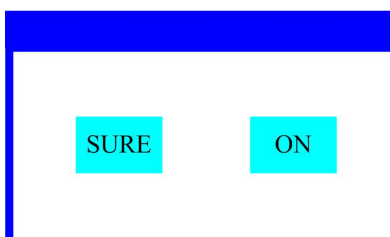


Figure 5 Dialog of confirm

4. Sub Menu (Parameter)



Figure 6 Parameter menu

3. Operation and parameter instruction

Click item of main menu, enter corresponding sub menu shown in Figure 6, In main menu, click 1/6 function button into corresponding parameter menu.

In sub menu(page), click main item on the left side of display, can shift to corresponding sub menu(page) quickly.

1. DMX Address setting

Enter page show in Figure6-1, can set fixture DMX address, channel mode and so on.

The menu settings of fixture have optimized the setting of addresses. Several settings of the address are as follows:

- Select " Prev " or "Next", the fixture will be based on the current address and channel mode, automatically calculate the next or last address, make address setting can quickly;
- Click on the address value, you can enter the numeric editing window, where you can set any valid address, fixture system automatically get the current number of channels, automatically filter the unusable address (512 - the current number of channels).
- Fixture support RDM protocol, remote address can be set through RDM.

Provide one buttons:

- Channel mode: you can choose different channel modes by cycle.

2. Fixture operating mode setting

Through the page shown in Figure 6-2, the operating mode of the fixture can be set and the lamp can be controlled. The fixture supports four operating modes (DMX mode, auto mode, voice control mode and scene mode). Detailed parameter settings can be refer in the previous section. Specific parameter descriptions are as follows:

operating mode

DMX Ctrl	DMX mode, receive DMX signal, RDM signal	
Auto Run	Fixture run automatically according to built-in programs	
Sound Ctrl	When the fixture detects a strong sound, the fixture automatically runs a scene according to the built-in program, otherwise it will stay the last scene	
Scene Mode 01	runs in a set scene, which supports most of the custom editing of 10 scenes.	
	1~10	outputs the specified scene
	Auto	Automatically loops the output scene in the set scene time (non-zero) order, and the scene with time 0 automatically ignore
M/S Choose	Master and slave selection, non-DMX mode takes effect, select the mode of data output, fixture detect DMX cable state automatic switch output, prevent data conflicts	
	Master	fixture runs built-in program. If DMX has no signal, it outputs data (synchronization), otherwise it does not output data.
	Slave	fixture runs built-in program and do not output data
	Auto	If DMX has no signal, the fixture will runs built-in program. Otherwise, the fixture will run in DMX Mode(follow DMX).

Lamp switch	(Lamp light source) pop-up confirmation dialog box, select "SURE" to confirm the current operation, turn on or off the lamp, switch time interval limited to 30 seconds	
	Off	the current lamp output is off
	On	The current lamp output is turned on

Scene mode applies to a single or a small number of fixture, just output a fixed scene, or need to run a simple program, you no need connect to the console, in the scene page can be edited.

If the light source is lamp, wait for 10 minutes before turning off the lamp.

3. Set display

The fixture support Chinese and English, invert display and so on. Enter the corresponding parameter settings as shown in Figure 6-3. The specific menu contents are as follows:

DISPLAY SETTING

Language	display language settings	
	English	English display
	Chinese	Chinese display
Screen saver	Set screen 30 seconds without operation, the screen's display content or method.	
	OFF	Keep the last operation page
	Mode1	Black
	Mode2	Black screen, showing the address code of the current fixture in the lower left corner.
	Mode3	Display trademark information, address code and operation mode.
Screen Rot	Set the display direction of the screen.	
	OFF	No reverse display
	ON	Reverse display
DMX Indicate	Set the indication mode of DMX signal indicator.	
	Mode1	When signal is bright, no signal is off.
	Mode2	When signal is off, no signal is bright.
	Mode3	When signal is flash, no signal is off.
Screen Light	Set the screen backlight for 10 seconds without operation	
	1~10	10

4. Scene

Enter the page shown in Figure 6-4, and the fixture enters the scene editing mode. Under this page, the fixture does not receive DMX console data, and the edited data will effect on the fixture immediately.

The content of the page depends on the currently selected channel mode, and the channel content and order displayed are consistent with the fixture channel table. Through this page, you can edit 10 scenes, as shown in the following table:

SCENE MODE

Scene Select	Select the current operation scenario.	
	1~10	The 10 scenes sets the format
Scene Time	Sets the retention time of the current scene when it is automatic, unit in 0.1 seconds.	
	0	The current scene is not output in automatic scene output.

	1-255	0..1s-25.5s
1. PAN	0-255	Set up the data of each channel, and the contents and order of the display are one-to-one correspondence with the channel list of fixture.
.....	0-255	
.....	0-255	
N. Function	0-255	

If the reset channel in the scene edits the effective reset data, the fixture will reset, but after reset, the corresponding reset channel value will automatically set 0, preventing multiple consecutive resets.

Looking at this page, you can get the current channel table slot of the fixture. For specific channel data, please refer to the detailed channel description.

5. Set light run parameter

Enter the page shown in Figure 6-5, adjust the field parameters of fixture, facilitate the installation of fixture, etc.

ADVANCED SETTING

Pan Invert	Set the rotation direction of PAN	
	OFF	
	ON	
Tilt Invert	Set the rotation direction of TILT	
	OFF	
	ON	
P/T Rectify	Setting up fixture to detect XY lost step and correct	
	OFF	Uncorrected position after out of step
	ON	After losing step, the position is automatically corrected and the out of step fault is recorded.
Pan Offset	Setting the zero point of the PAN of the fixture	
	4-150	
Tilt Offset	Setting the zero point of the TILT of the fixture	
	4-48	
Data hold	When the fixture is not equipped with DMX signal, the output state of the fixture	
	OFF	No signal, so the motor and light source return to the position and state when reset is completed.
	ON	No signal, keep the last frame DMX data output.
Lamp mode	(lamp light source) Set the way to first open the lamp after power up	
	Power on	Turn on the lamp at power up and reset the lamp after 30 seconds.
	After reset	Reset the fixture after 3 seconds when power-on, and turn on the lamp after reset.
	Manual	After reset, manually turn on the lamp through the menu or console.
Reset	Reset fixture	
Factory Setting	Pop up the confirmation box, select "SURE", and return the lamp parameters to the factory settings.	

When choosing power-on mode, the lamp will wait for 30 seconds after power-on, let the lamp fully start, internal voltage is stable enough, then start the reset program, if the field capacity is

stable, recommend power-on mode.

When the fixture can not calibrate the position, please check whether the "P/T Rectify" is turned off.

When the signal is unplugged, check the Data Hold setting first if the position of the fixture is not output as expected.

When setting the XY offset, after setting up, please control XY with the maximum stroke first to check that XY will not bump into the positioning rod or shell.

6. Status and information

Entering the page shown in Figure 6-6, you can view the information and real-time status of the fixture to get their usage status. If the fixture need customer service, please provide the status information displayed on the page as a basis for judgment, as shown in the following table:

STATUS INFORMATION

Stepper info	Display information status of all motors and signals in fixture.	
	Hall	No display, indicating that the motor has no Hall, 0 indicating that the motor leaves the correction position point, 1 indicating that the motor is in the correction position point
	Status	Display motor reset status
	PAN	Display real-time position value of PAN optocoupler feedback
	TILT	Display real-time position value of TILT optocoupler feedback
	PAN OP	Displays the PAN TILT optocoupler two signal level state, binary
Error Logging	Show the latest 8 error records when the fixture is reset and running. The error records are not saved after power failure. The current power cycle is valid.	
	Error Logging	Total number of failures detected after power on
	12: :03	The time of power failure when the fault occurs is in minutes.
	Hall error	The effective hall signal is not detected when the motor is reset
	Hall short	When the motor is reset, the hall signal of the motor is always effective
	Opti error	No effective optocoupler signal is detected when the motor is reset.
	Lose stop	The corresponding motor is out of step during its operation.
	Hit	Striking the positioning rod when the motor is reset
	Lamp error	Lamp explosion accident
	NTC error	The temperature sensor signal is abnormal
	Fan error	The main fan is not working properly.
Fixture status	Displays the critical state data of the current fixture for reference.	
	Communication prec	0~100%, Communication quality of internal data link of lamps and lanterns
	Error cnt	The number of erroneous frames was detected after power on, and the total number of erroneous frames was detected.
	Light Temperature	Show the temperature of the current light source, "---" means no detection.
	Panel Temperature	Displays the temperature of the current display panel or the ambient temperature.

	Sensor1 Temperature	Display the ambient temperature of the motherboard temperature or the motherboard installation position.
Version		Display the information and version of the current fixture, important reference for after sales maintenance.
	Device	The name of the fixture is the same as the equipment information of RDM.
	Model	The type of fixture is the same as the model information of RDM.
	Panel	Firmware version and serial number of display panel
	Main Board	Firmware version and serial number of mother board 1
Light time		Record the total cumulative time of light source opening, unit minute, user manual cleaning, as a reference for regular maintenance of light source time
Total time		The total accumulated time for recording the opening of fixture is not allowed to be removed.

Chapter 3 Channel description

1. Channel table

This luminaire channel can be viewed in scene mode in order, channel mode is set in the "Address Settings" page, specific details of the data as follows:

CHANNEL TABLE

CHANNEL1	CHANNEL2	NAME	VALUE	DEFIE
CH1	CH1	PAN	0-255	0-540
CH2		PAN Fine	0-255	
CH3	CH2	TITL	0-255	0-270
CH4		TILT Fine	0-255	
CH5		XY speed	0-255	fast to slow
CH6	CH3	Dimmer	0-255	0-100% Dimmer
CH7	CH4	Strobe	0-3	Dark
			4-127	Slow strobe to fast strobe
			128-191	Slow strobe to fast strobe(mode 2)
			192-251	Slow strobe to fast rand strobe
			252-255	White
CH8		Color	0-4	White
			5-9	White + Color1
			10-14	Color1
			15-19	Color1 + Color2
			20-24	Color2
			25-29	Color2 + Color3
			30-34	Color3
			35-39	Color3 + Color4
			40-44	Color4
			45-49	Color4 + Color5
			50-54	Color5
			55-59	Color5 + Color6
			60-64	Color6
			65-69	Color6 + Color7
			70-74	Color7
			75-79	Color7 + Color8
			80-84	Color8
			85-89	Color8 + Color9
			90-94	Color9
95-99	Color9 + Color10			
100-104	Color10			
105-109	Color10 + Color11			
110-114	Color11			

			115-119	Color11 + Color12
			120-124	Color12
			125-129	Color12 + Color13
			130-134	Color13
			135-139	Color13 + Color14
			140-149	White
			150-199	Rotate forward (fast to slow)
			200-205	Stop
			206-255	Rotate reverse (slow to fast)
CH9		Gobo	0-9	White
			10-19	White
			20-29	GOB01
			30-39	GOB02
			40-49	GOB03
			50-59	GOB04
			60-69	GOB05
			70-79	GOB06
			80-89	GOB07
			90-99	GOB08
			100-109	GOB09
			110-119	GOB010
			120-127	Shake slow to fast GOB01
			128-135	Shake slow to fast GOB02
			136-143	Shake slow to fast GOB03
			144-151	Shake slow to fast GOB04
			152-159	Shake slow to fast GOB05
			160-167	Shake slow to fast GOB06
			168-175	Shake slow to fast GOB07
			176-183	Shake slow to fast GOB08
			184-191	Shake slow to fast GOB09
			192-199	Shake slow to fast GOB010
			200-207	Shake slow to fast GOB011
208-230	Rotate forward (fast to slow)			
231-232	Stop			
233-255	Rotate reverse (slow to fast)			
CH10		Focus	0-255	far to near
CH11		Prism1	0-127	None
			128-255	Insert prism1
CH12		Prism1 Rot	0-63	0-400 degrees
			64-126	Rotate forward (fast to slow)
			127-128	Stop
			129-191	Rotate reverse (slow to fast)
			192-255	Rotate circle (slow to fast)

CH13		Prism2	0-127	None
			128-255	Insert prism2
CH14		Prism2 Rot	0-63	0-400 degrees
			64-126	Rotate forward (fast to slow)
			127-128	Stop
			129-191	Rotate reverse (slow to fast)
			192-255	Rotate circle (slow to fast)
CH15		Frost	0-127	None
			128-255	insert Frost
CH16		7 Colour	0	None
			1-255	linear insert 7colour
CH17	CH5	Effect Auto	0-127	None
			1-255	Auto run
CH18	CH6	XY Auto	0-127	None
			128-255	Auto run
CH19		Reset	26-76	Reset Effect motor over 3 seconds
			77-128	Reset XY motor over 3 seconds
			129-255	Reset over 3 seconds

POWER SUPPLIE

Input power:AC100-240V 50/60 Hz

Power consumption :150W

Led : 1 pcs 100W LED

DMX channel:6/19 channels

Pan scan: 540°(16bit) Electric correction

Tilt scan: 270° (16bit) Electric correction

Color wheel: 13 colors+open

Static Gobo: 11 gobos+open

Effect Wheel: two Effect prism,one Rotation 16- prism,one Rotation 8 prism effect move ,
Bi-directional rotation

Color chips: 1 colorful chip (6 color)

Control mode:DMX512/Master-Slave/Auto run

Dimmer : 0- 100 %

Strobe:0-20 HZ

Display:LCD display

WEIGHT&SIZE

N.W: 11.5KG

G.W: 13KG

Packing size: 48.5*39*36.5CM